



The weight is used to increase the ON/OFF span. By using the weight lower than the stand pipe the fulcrum point can be changed and the RUN span can be increased.

US Water
systems.com